
OBJ_BUCH-1375-003.book Page 1 Thursday, January 29, 2015 12:34 PM

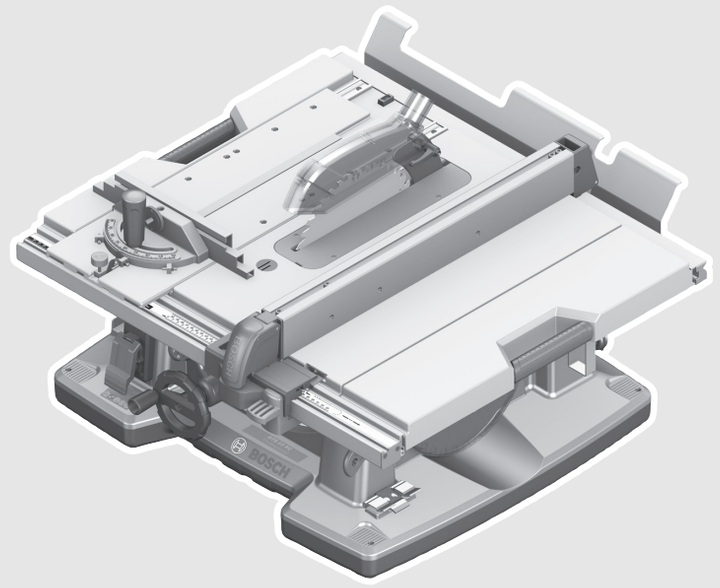

Robert Bosch GmbH
Power Tools Division
70764 Leinfelden-Echterdingen
GERMANY

www.bosch-pt.com

1 609 92A 15S (2015.01) PS / 422 **EURO**


1 609 92A 15S

GTS 10 XC Professional


BOSCH


de Originalbetriebsanleitung
en Original instructions
fr Notice originale
es Manual original
pt Manual original
it Istruzioni originali
nl Oorspronkelijke gebruiksaanwijzing
da Original brugsanvisning
sv Bruksanvisning i original
no Original driftsinstruks
fi Alkuperäiset ohjeet
el Πρωτότυπο οδηγιών χρήσης
tr Orijinal işletme talimatı
pl Instrukcja oryginalna
cs Původní návod k používání
sk Pôvodný návod na použitie
hu Eredeti használati utasítás
ru Оригинальное руководство по эксплуатации
uk Оригінальна інструкція з експлуатації
kk Пайдалану нұсқаулығының түпнұсқасы
ro Instrucţiuni originale
bg Оригинална инструкция
mk Оригинално упатство за работа
sr Originalno uputstvo za rad
sl Izvirna navodila
hr Originalne upute za rad
et Algupärane kasutusjuhend
lv Instrukcijas oriģinālvalodā
lt Originali instrukcija
ar تعليمات التشغيل الأصلية
fa دفترچه راهنمای اصلی

OBJ_BUCH-1375-003.book Page 3 Thursday, January 29, 2015 12:34 PM

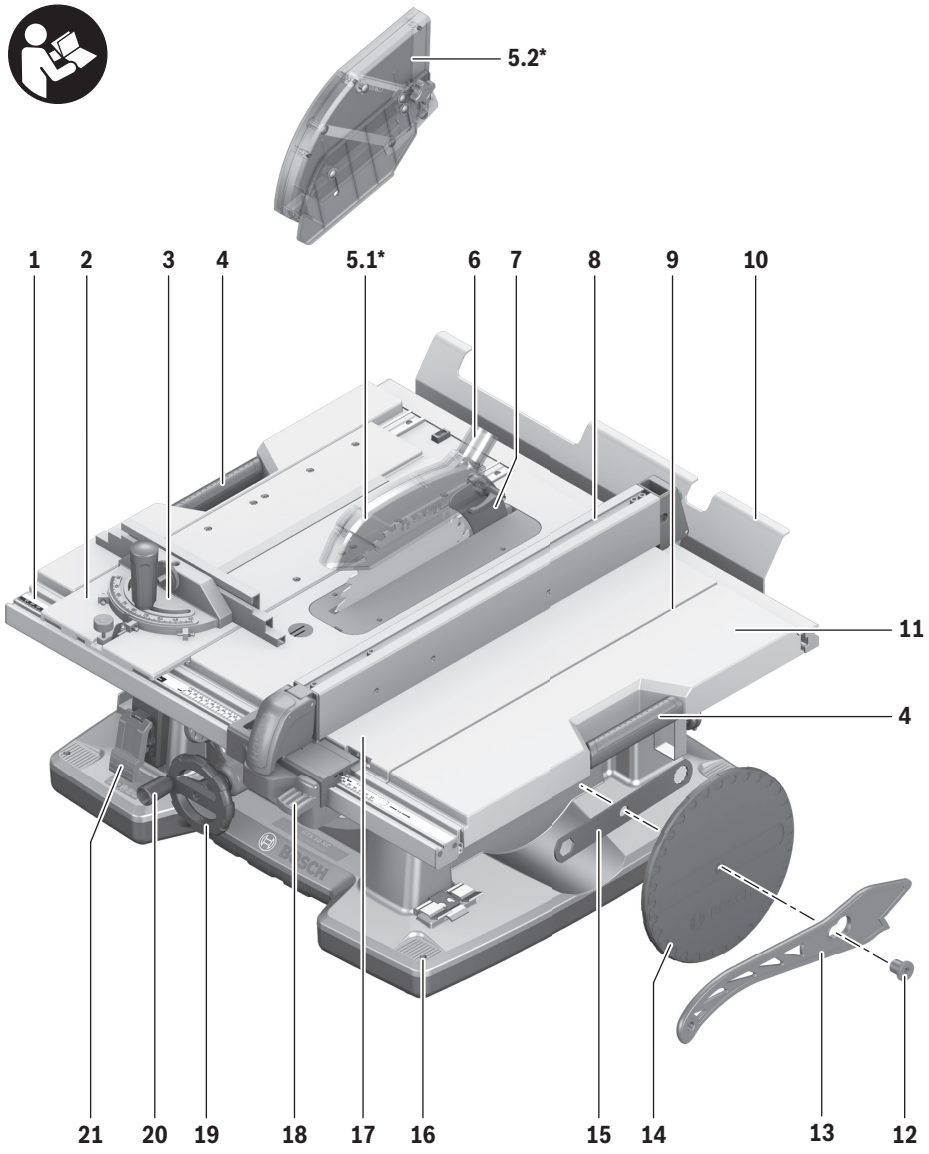


OBJ_BUCH-1375-003.book Page 4 Thursday, January 29, 2015 12:34 PM

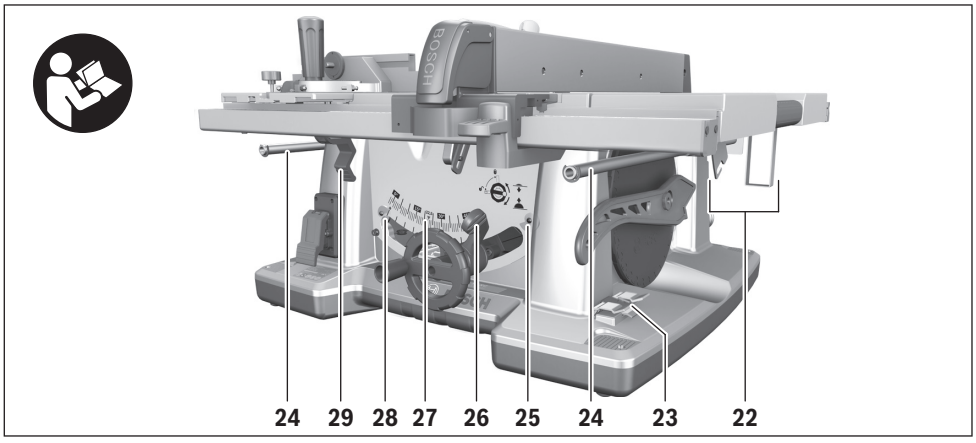


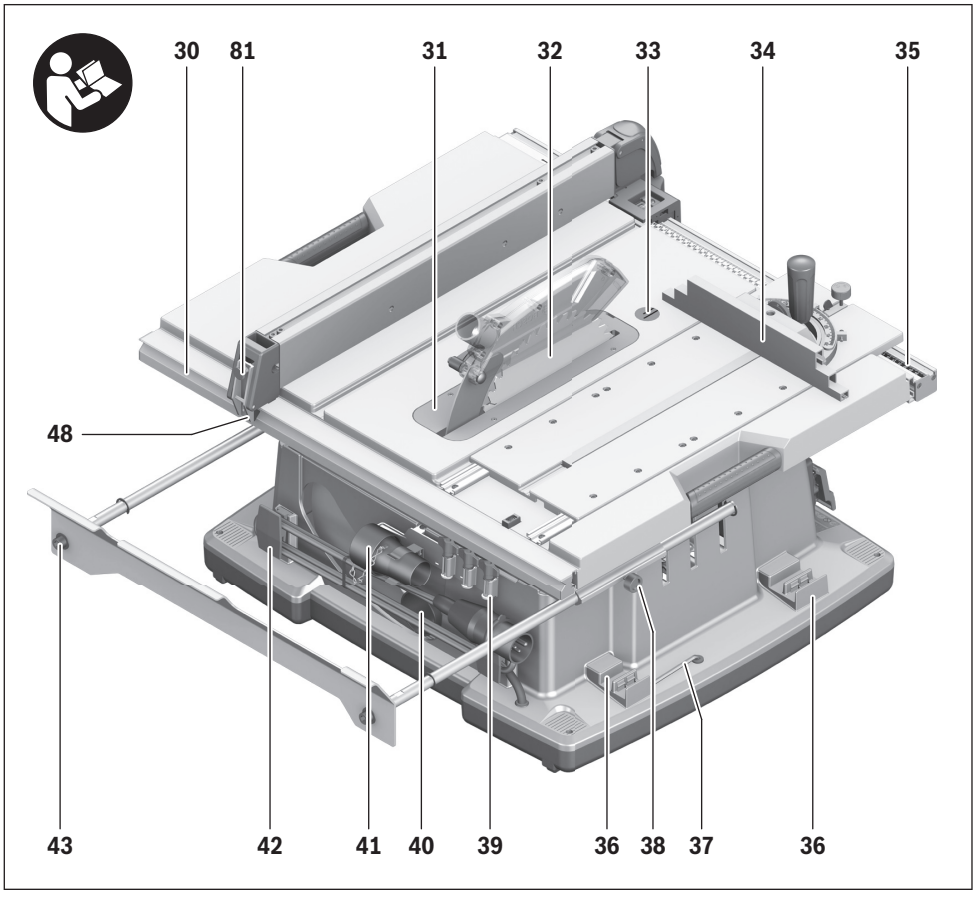


OBJ_BUCH-1375-003.book Page 5 Thursday, January 29, 2015 12:34 PM

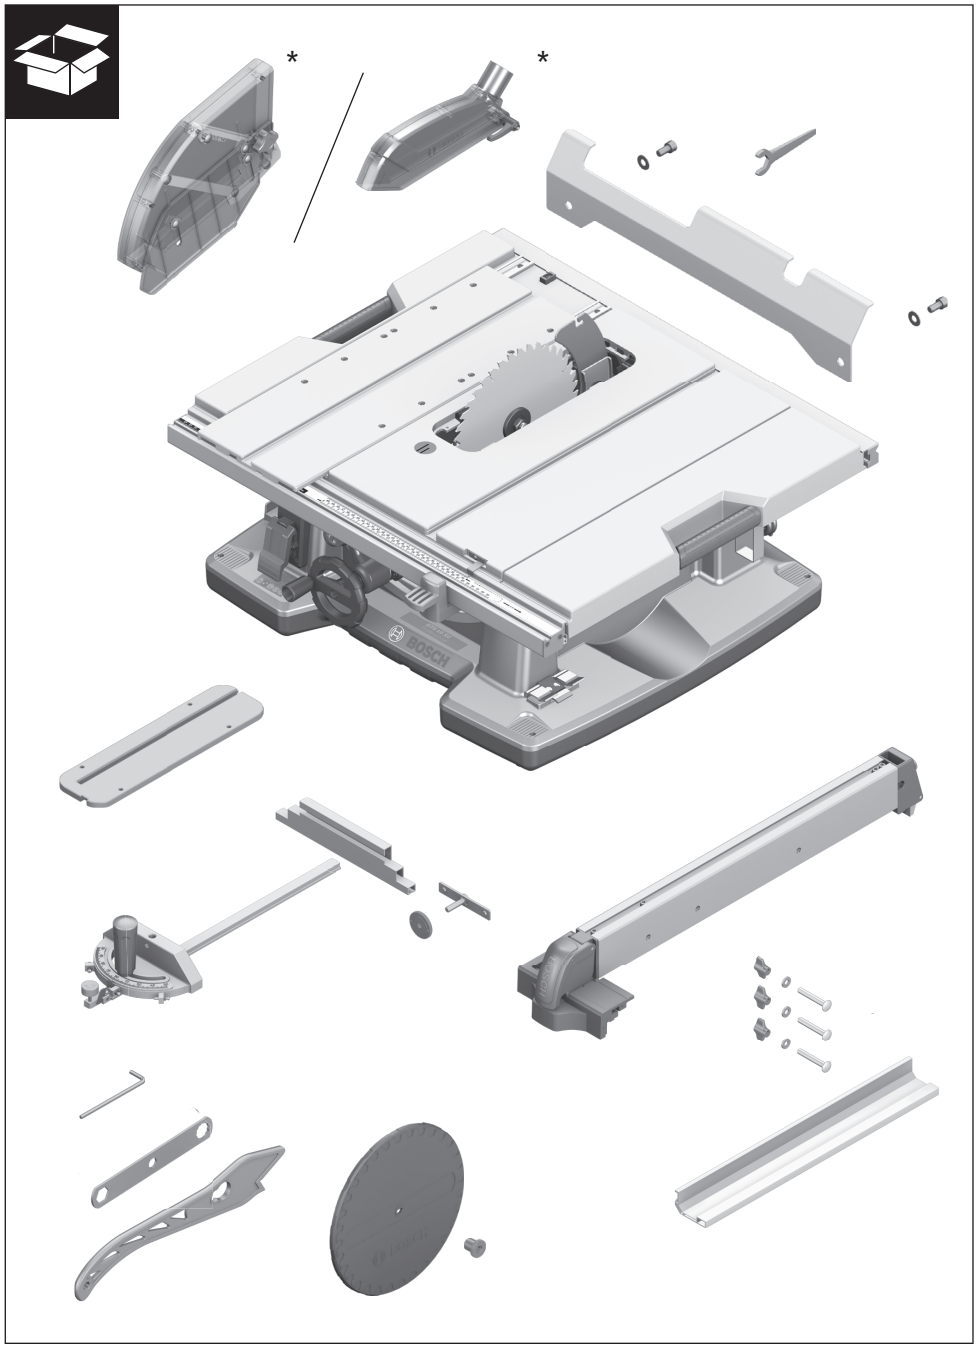



OBJ_BUCH-1375-003.book Page 6 Thursday, January 29, 2015 12:34 PM

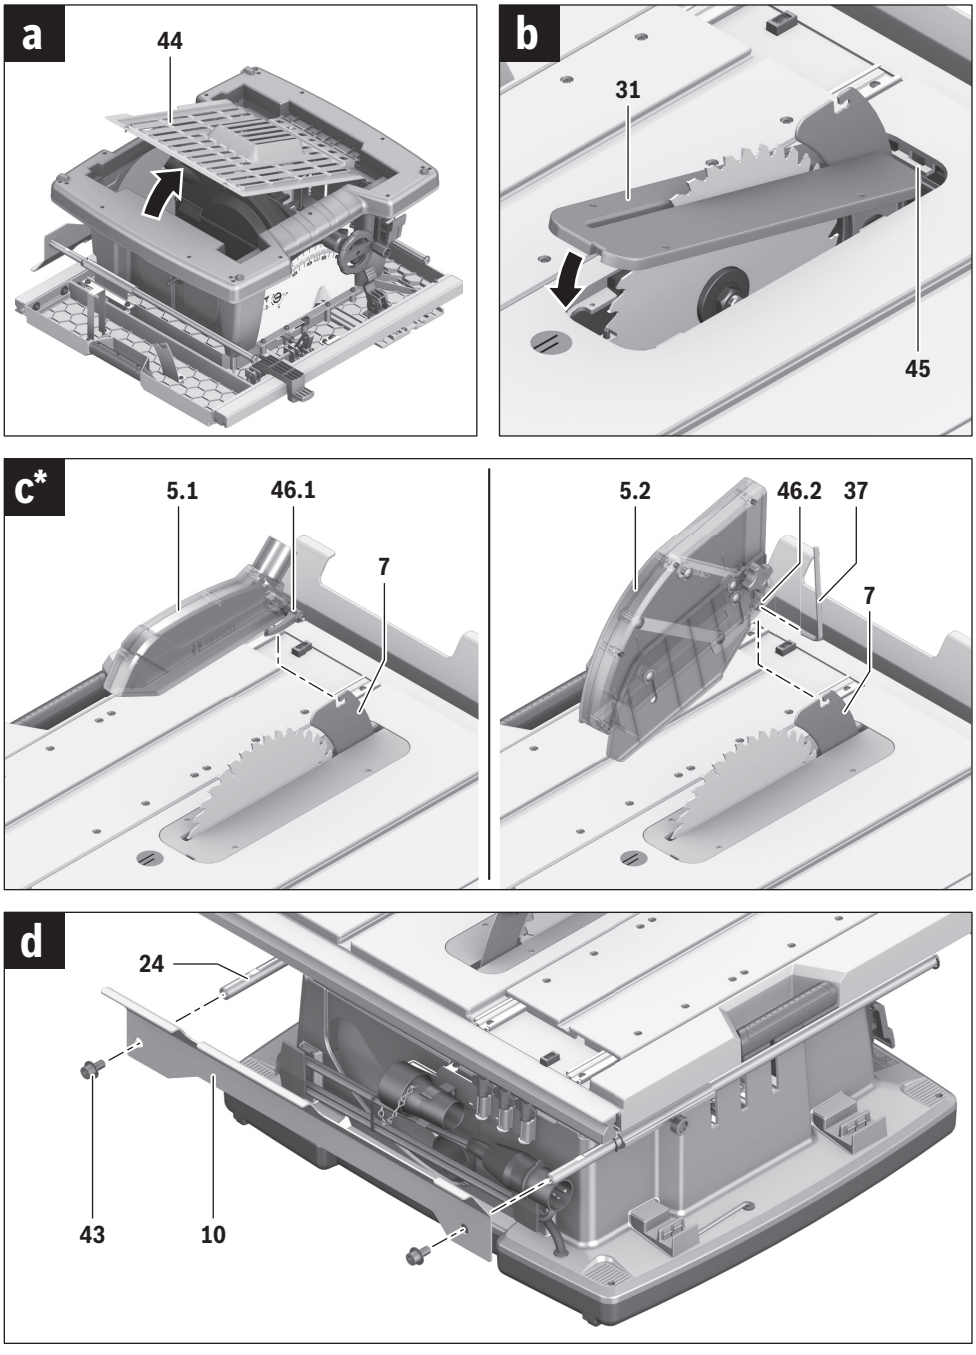



OBJ_BUCH-1375-003.book Page 7 Thursday, January 29, 2015 12:34 PM

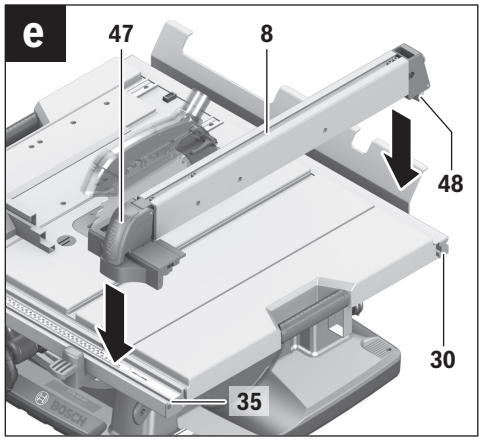

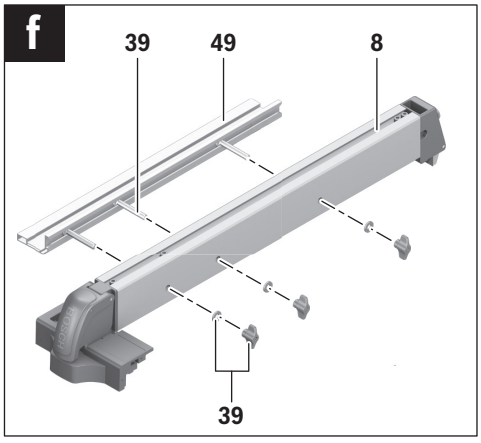

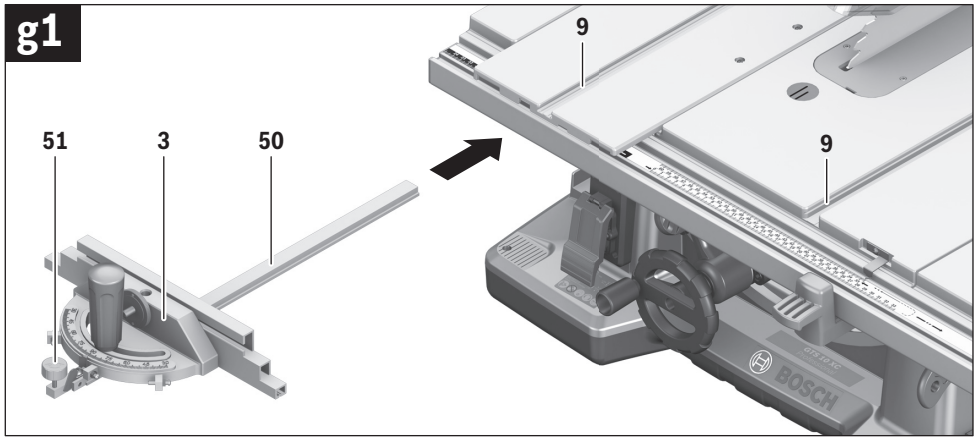

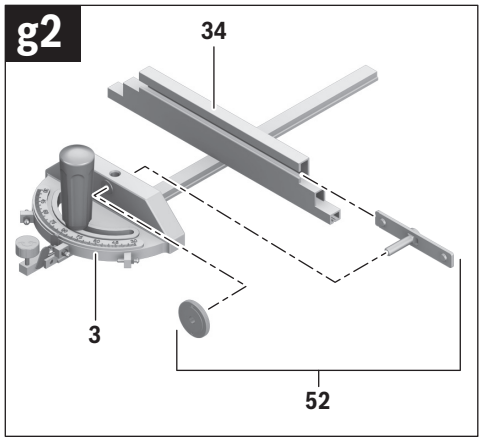

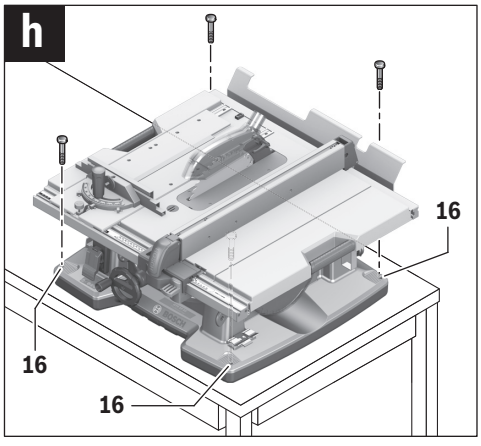


OBJ_BUCH-1375-003.book Page 8 Thursday, January 29, 2015 12:34 PM

i




GTA 60 W

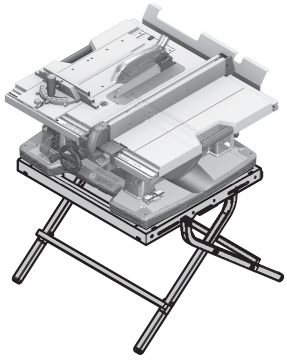



GTA 6000


j

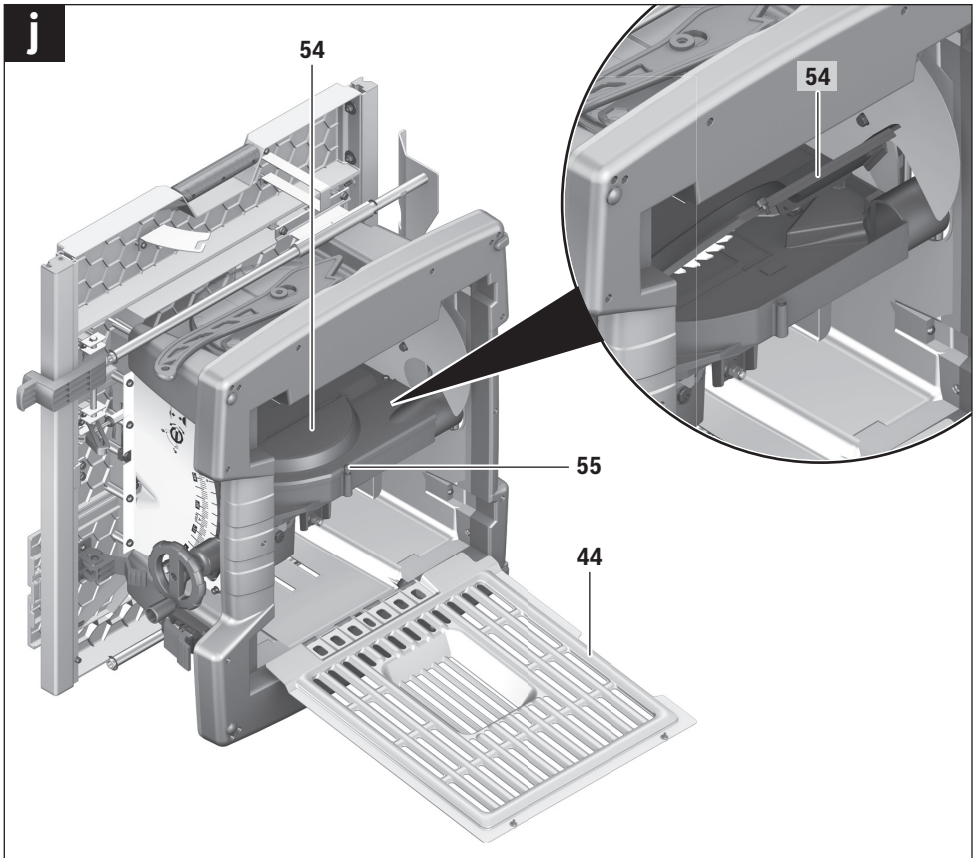



OBJ_BUCH-1375-003.book Page 9 Thursday, January 29, 2015 12:34 PM

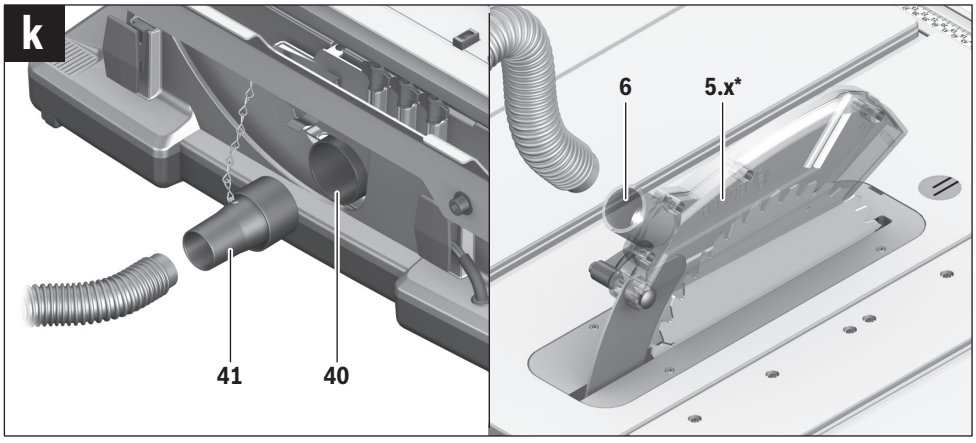

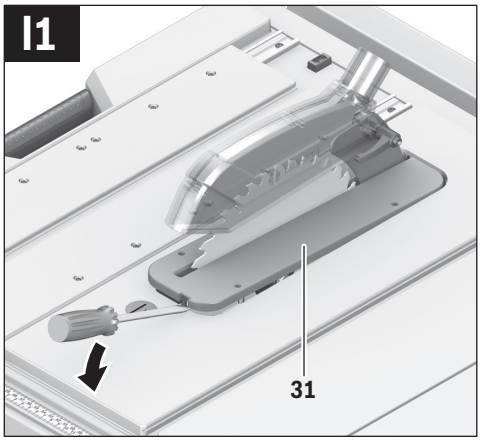


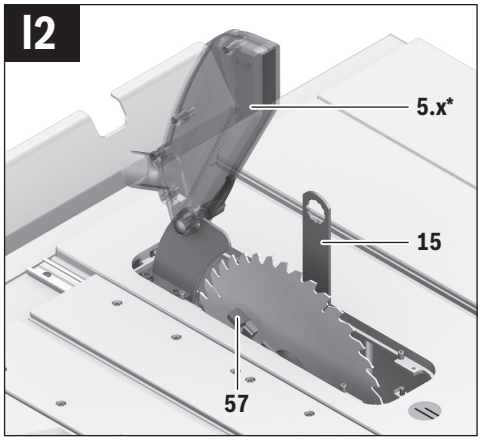


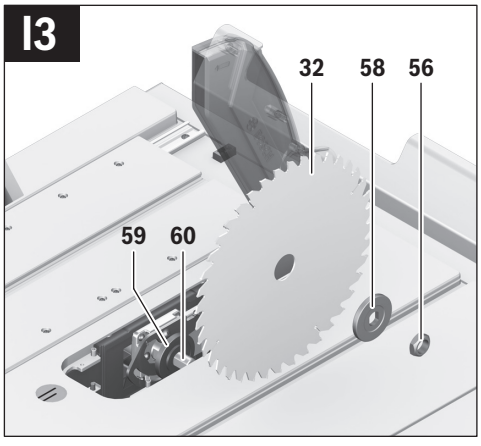


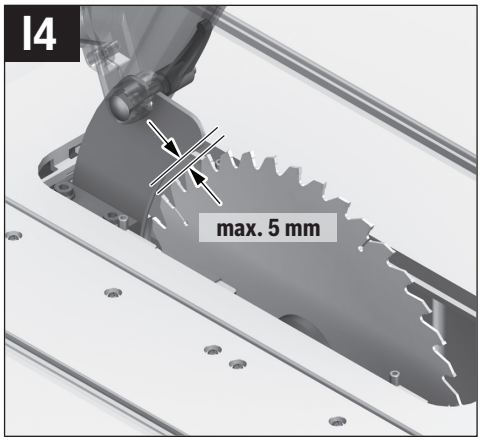



OBJ_BUCH-1375-003.book Page 10 Thursday, January 29, 2015 12:34 PM

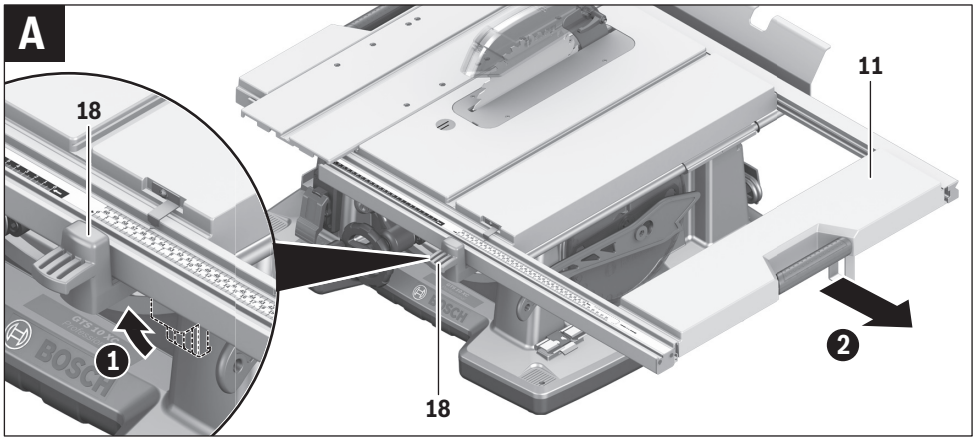

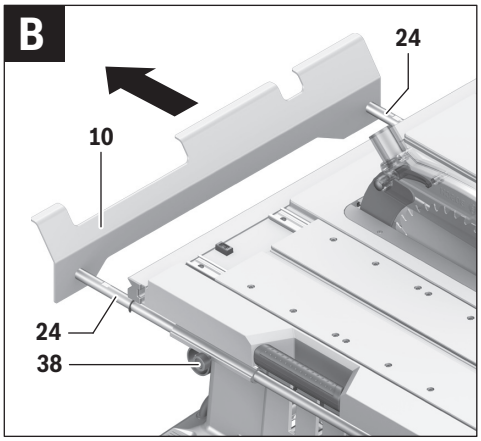


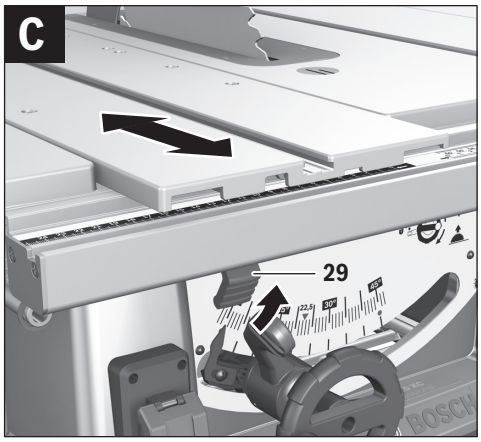


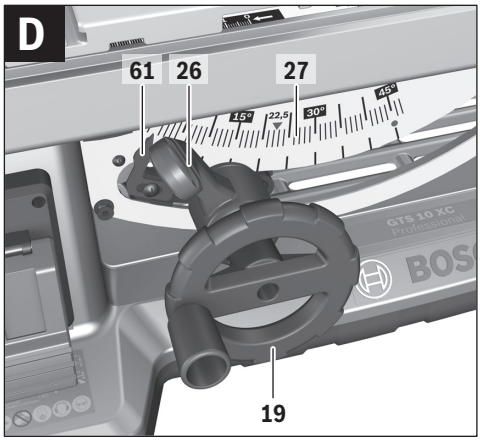


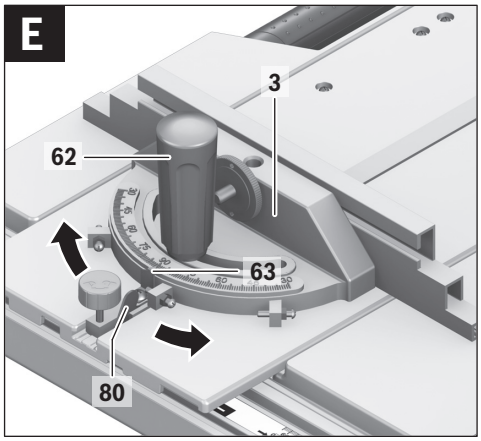



OBJ_BUCH-1375-003.book Page 11 Thursday, January 29, 2015 12:34 PM

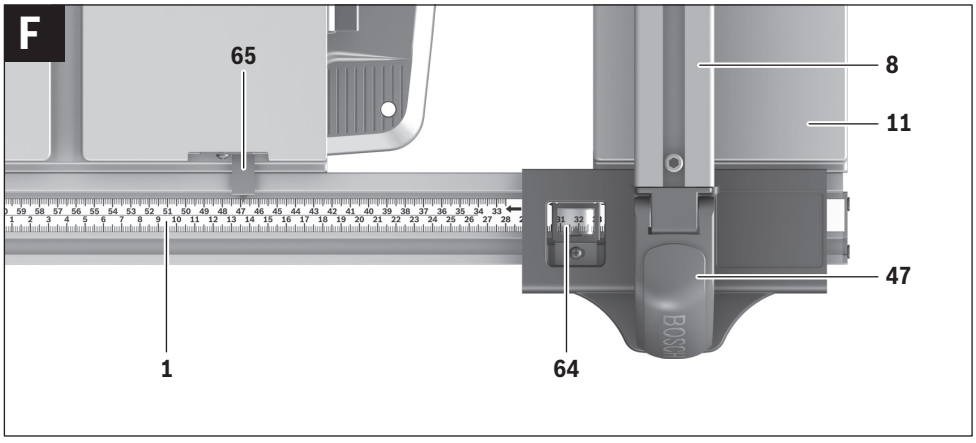

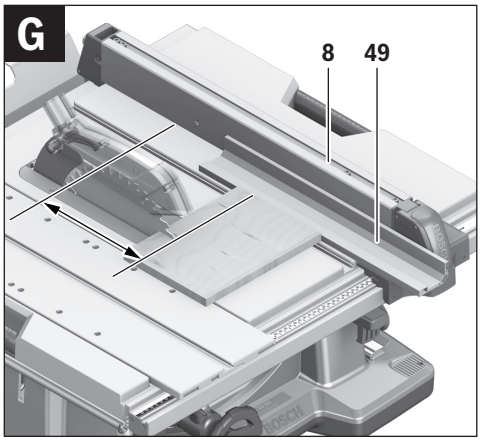

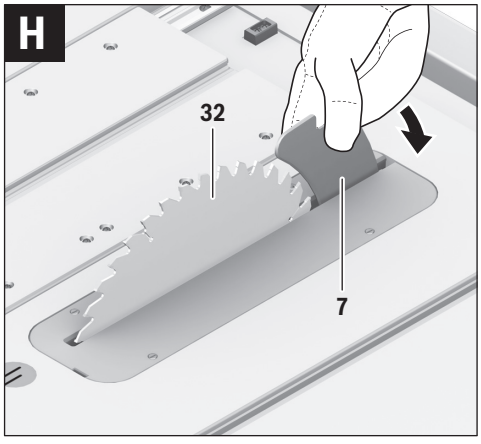


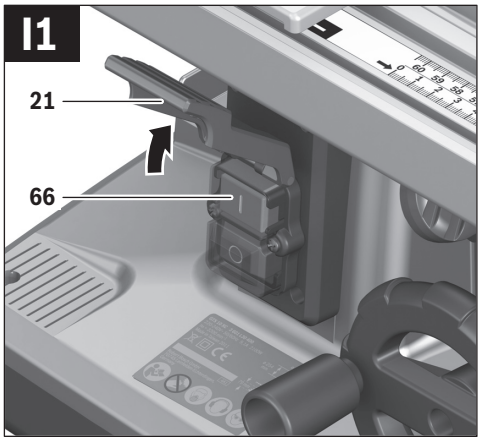


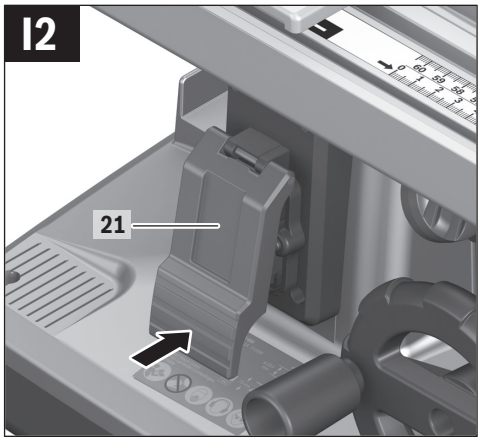


OBJ_BUCH-1375-003.book Page 12 Thursday, January 29, 2015 12:34 PM


J

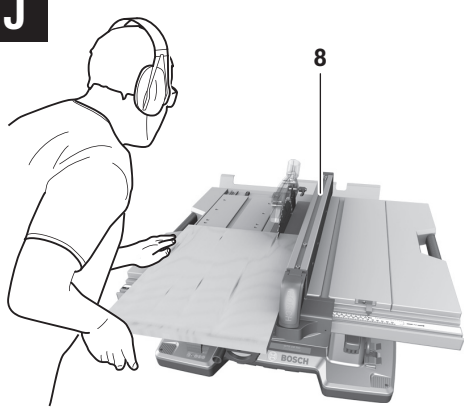

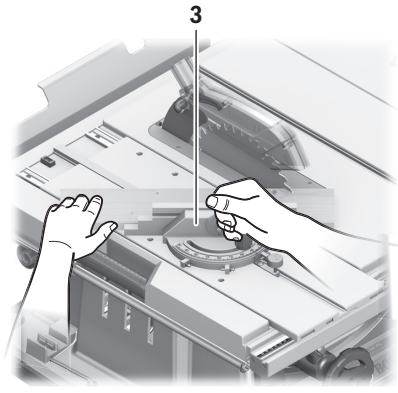


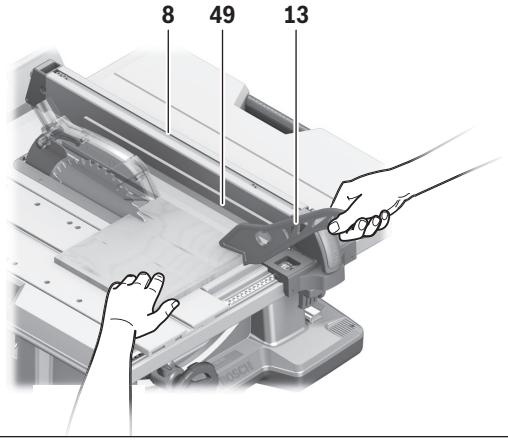


K

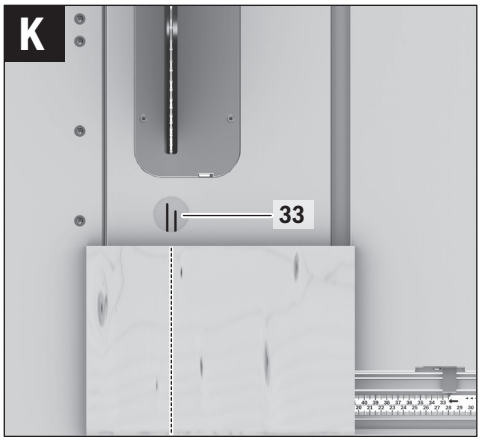



L

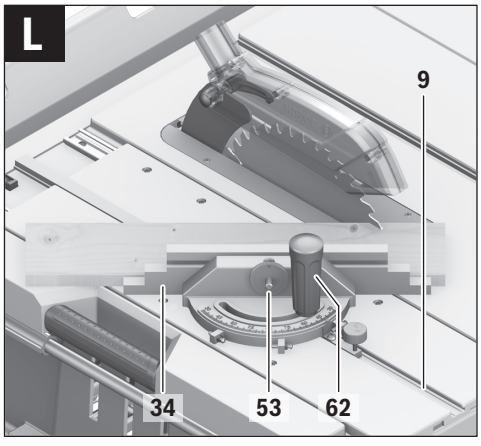


OBJ_BUCH-1375-003.book Page 13 Thursday, January 29, 2015 12:34 PM

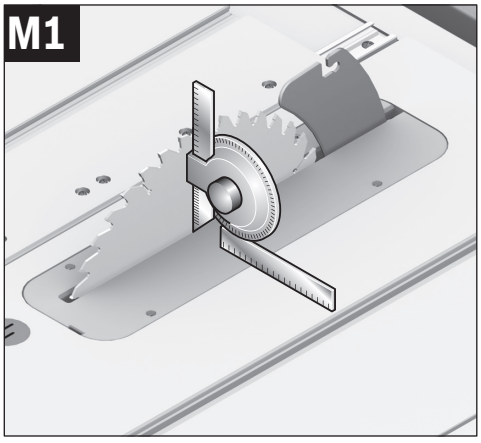


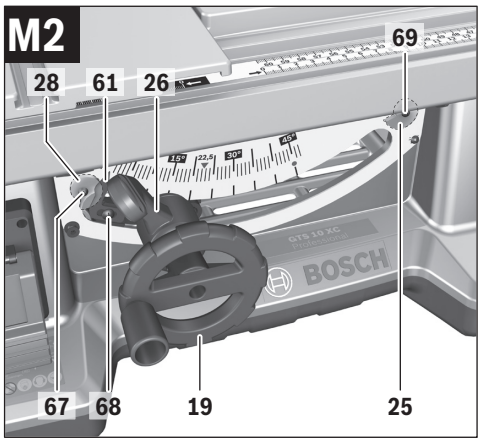


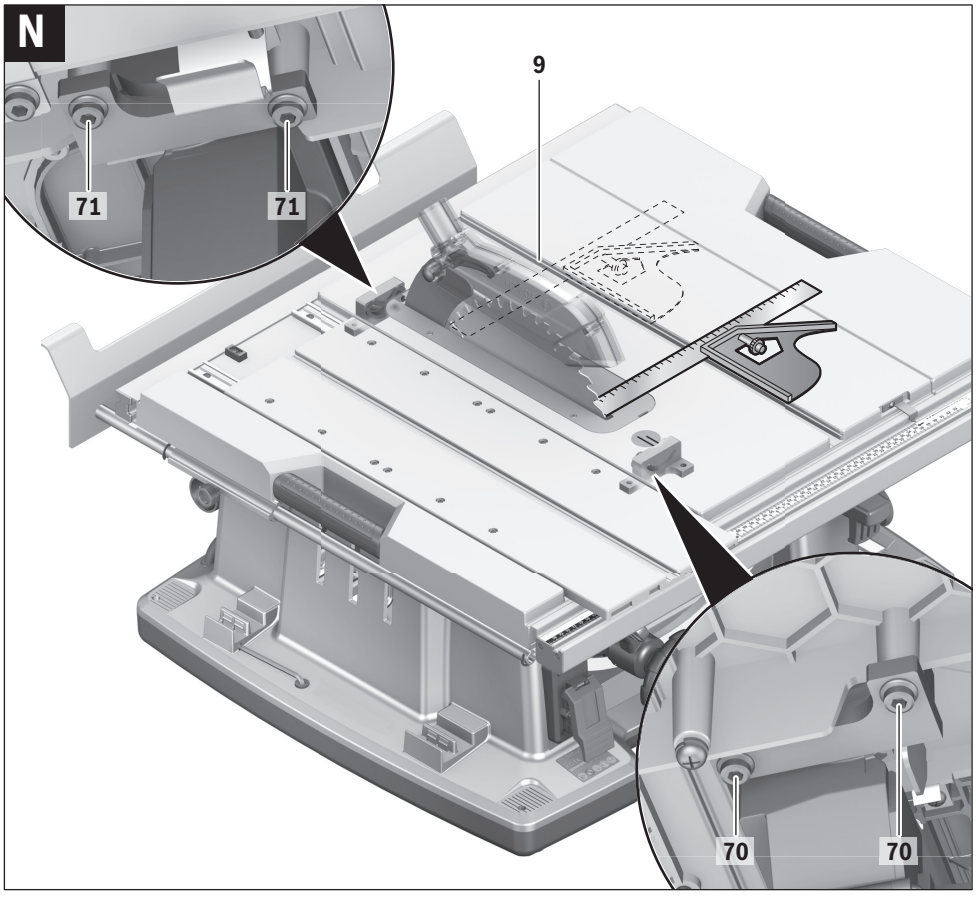



OBJ_BUCH-1375-003.book Page 14 Thursday, January 29, 2015 12:34 PM

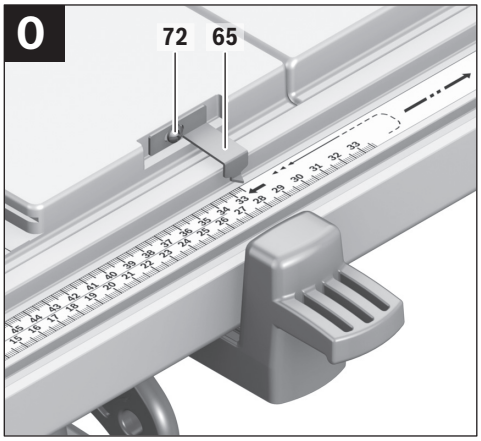


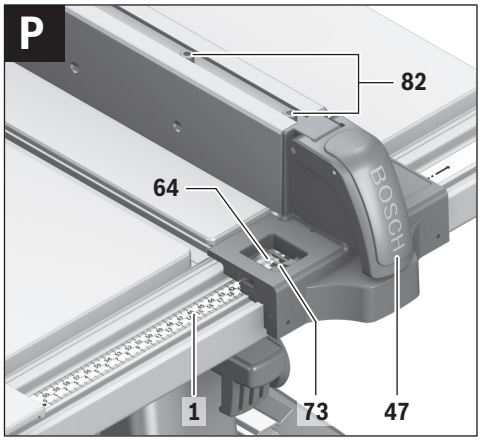

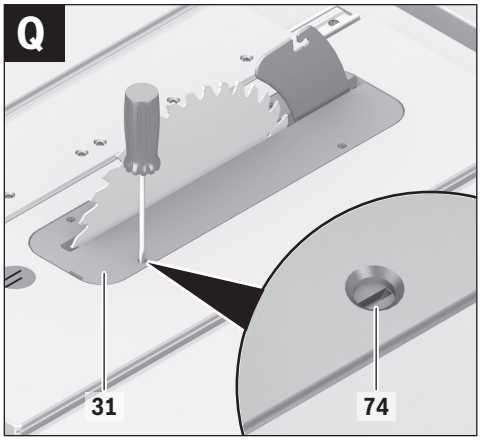

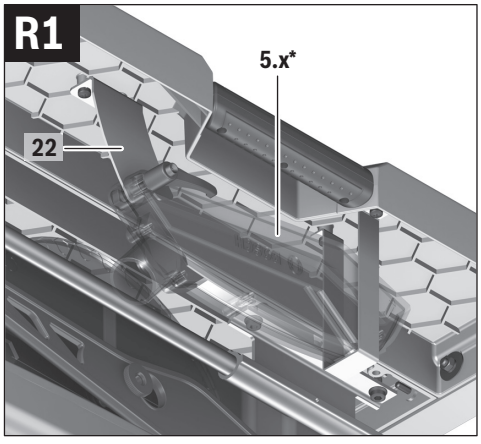


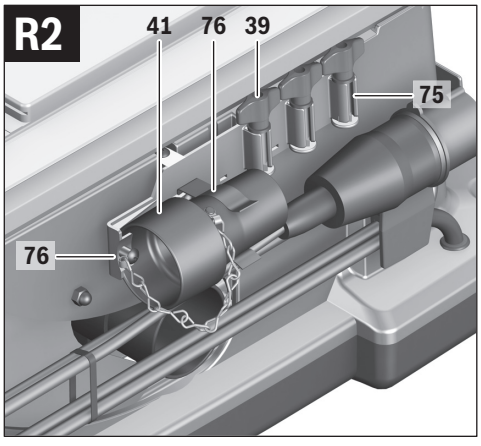

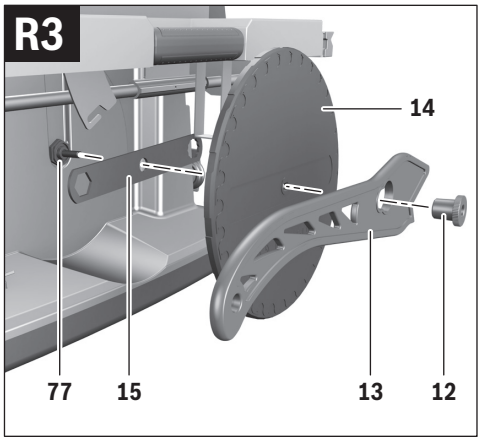


OBJ_BUCH-1375-003.book Page 15 Thursday, January 29, 2015 12:34 PM


R4

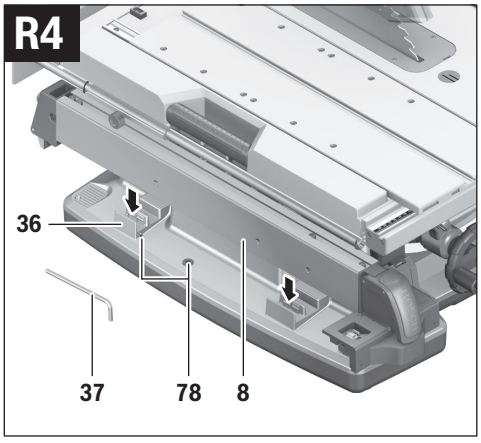


R5

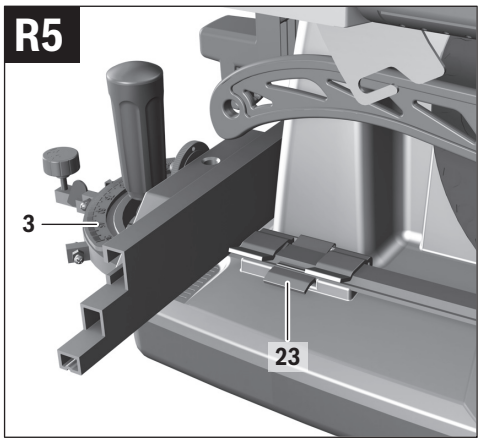


R6

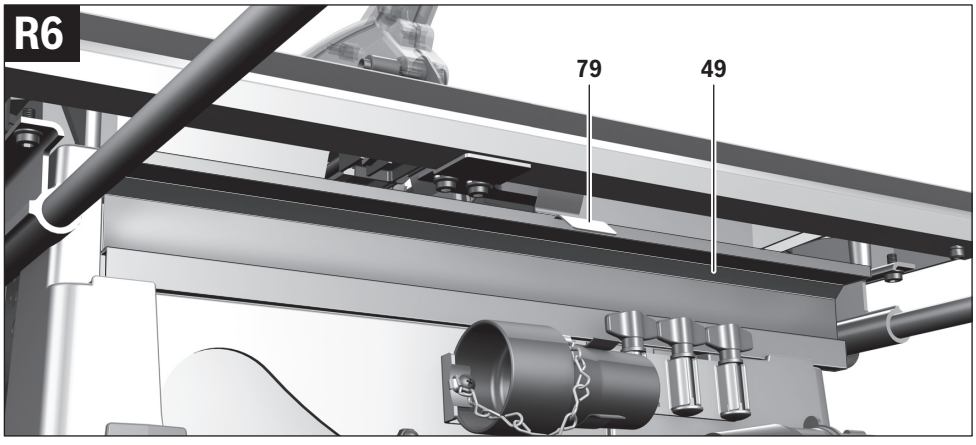

S1

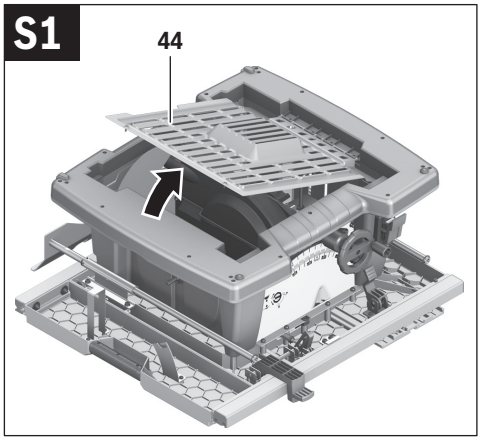

S2

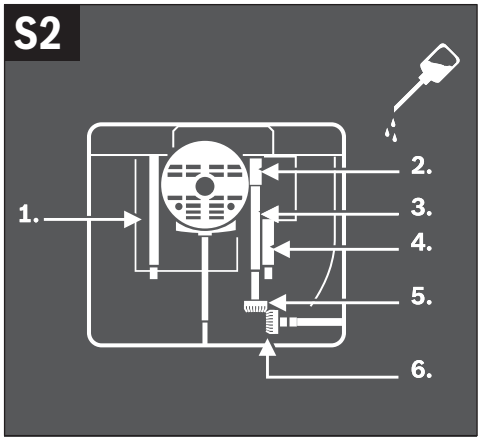

OBJ_BUCH-1375-003.book Page 29 Thursday, January 29, 2015 12:34 PM

English

Safety Notes

General Power Tool Safety Warnings

⚠ IMPORTANT When using electric tools basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury including the following.

Read all these instructions before attempting to operate this product and save these instructions.

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

Work area safety

- **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

Electrical safety

- **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges and moving parts.** Damaged or entangled cords increase the risk of electric shock.
- **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

Personal safety

- **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.

Power tool use and care

- **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool’s operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

Service

- **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

OBJ_BUCH-1375-003.book Page 30 Thursday, January 29, 2015 12:34 PM

Safety Warnings for Table Saws

- **Never stand on the power tool.** Serious injuries can occur when the power tool tips over or when inadvertently coming into contact with the saw blade.
- **Take care that the blade guard operates properly and can move freely.** Always adjust the blade guard in such a manner that it faces loosely against the workpiece when sawing. Never clamp the blade guard when it is open.
- **Keep hands away from the cutting area while the machine is running.** Danger of injury when coming in contact with the saw blade.
- **Never reach behind the saw blade in order to hold the workpiece, remove saw dust/wood chips or for any other reason.** The clearance of your hand to the rotating saw blade is too small.
- **Guide the workpiece against the saw blade only when the machine is switched on.** Otherwise there is damage of kickback, when the saw blade becomes wedged in the workpiece.
- **Keep handles dry, clean, and free from oil and grease.** Greasy, oily handles are slippery causing loss of control.
- **Operate the power tool only when the work area to the workpiece is clear of any adjusting tools, wood chips, etc.** Small pieces of wood or other objects that come in contact with the rotating saw blade can strike the operator with high speed.
- **Only saw one workpiece at a time.** Workpieces placed on top or aside of each other can cause the saw blade to jam or the workpieces to move against each other while sawing.
- **Always use the parallel guide or the angle guide.** This improves the cutting accuracy and reduces the possibility of saw blade binding.
- **Use the machine for grooving or rebating only with an appropriately suitable protective device (e. g. a tunnel blade guard).**
- **Do not use the machine for cutting slots (stopped grooves).**
- **Use the machine only for cutting the materials listed under Intended Use.** Otherwise, the machine can be subject to overload.
- **If the saw blade should become jammed, switch the machine off and hold the workpiece until the saw blade comes to a complete stop. To prevent kickback, the workpiece may not be moved until after the machine has come to a complete stop.** Correct the cause for the jamming of the saw blade before restarting the machine.
- **Do not use dull, cracked, bent or damaged saw blades.** Unsharpened or improperly set saw blades produce narrow kerf causing excessive friction, blade binding and kickback.
- **Always use blades with correct size and shape (diamond versus round) of arbour holes.** Blades that do not match the mounting hardware of the saw will run eccentrically, causing loss of control.
- **Do not use high speed steel (HSS) saw blades.** Such saw blades can easily break.
- **Do not touch the saw blade after working before it has cooled.** The saw blade becomes very hot while working.
- **Keep your workplace clean.** Blends of materials are particularly dangerous. Dust from light alloys can burn or explode.
- **Never operate the machine without the insert plate. Replace a defective insert plate.** Without flawless insert plates, injuries are possible from the saw blade.
- **Check the cable regularly and have a damaged cable repaired only through an authorised customer service agent for Bosch power tools. Replace damaged extension cables.** This will ensure that the safety of the power tool is maintained.
- **Store the machine in a safe manner when not being used. The storage location must be dry and lockable.** This prevents the machine from storage damage, and from being operated by untrained persons.
- **Never leave the machine before it has come to a complete stop.** Cutting tools that are still running can cause injuries.
- **Never use the machine with a damaged cable. Do not touch the damaged cable and pull the mains plug when the cable is damaged while working.** Damaged cables increase the risk of an electric shock.

Products sold in GB only: Your product is fitted with a BS 1363/A approved electric plug with internal fuse (ASTA approved to BS 1362).
If the plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place by an authorised customer service agent. The replacement plug should have the same fuse rating as the original plug.
The severed plug must be disposed of to avoid a possible shock hazard and should never be inserted into a mains socket elsewhere.
Products sold in AUS and NZ only: Use a residual current device (RCD) with a rated residual current of 30 mA or less.

Symbols

The following symbols can be important for the operation of your power tool. Please memorise the symbols and their meanings. The correct interpretation of the symbols helps you operate the power tool better and more secure.

Symbols and their meaning	
	**Keep hands away from the cutting area while the machine is running.** Danger of injury when coming in contact with the saw blade.
	**Wear a dust respirator.**

OBJ_BUCH-1375-003.book Page 31 Thursday, January 29, 2015 12:34 PM


Symbols and their meaning




Wear ear protectors. Exposure to noise can cause hearing loss.



Wear safety goggles.

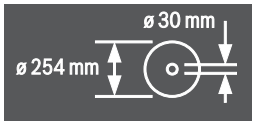

Observe the dimensions of the saw blade. The hole diameter must match the tool spindle without play. Do not use reducers or adapters.

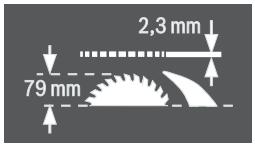

When changing the saw blade, pay attention that the kerf width is not less than 2,3 mm and the blade body thickness not greater than 2,3 mm. Otherwise, there is danger that the riving knife (2,3 mm) becomes wedged in the workpiece.


The maximal possible workpiece height is 79 mm.

Left side



Indicates the position of the locking lever for locking the saw blade and for adjusting the bevel angle (saw blade tiltable).

Right side




Indicates the rotation direction of the handwheel for lowering (**transport position**) and raising (**working position**) the saw blade.



Turning direction of the knurled screw for locking/releasing the angle stop on the sliding table.

Symbols and their meaning

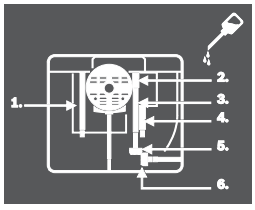

If required, open the bottom plate and apply oil to the lubrication points of the power tool at the indicated locations.

Product Description and Specifications



Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Intended Use

The power tool is intended as a stationary machine for making straight lengthways and crossways cuts in hard and softwood, as well as in particle and fibre board. In this, mitre angles from −60° to +60° as well as bevel angles from −1° to +47° are possible.

When using appropriate saw blades, sawing aluminium profiles and plastic is also possible.

Product Features

The numbering of the components shown refers to the representation of the power tool on the graphic pages.

1 Scale for clearance of the saw blade to the parallel guide **8**
2 Sliding table
3 Angle stop
4 Carrying handle
5.1 Blade guard with clamping lever*
5.2 Blade guard with clamping screw and side protector*
6 Vacuum connection on the blade guard
7 Riving knife
8 Parallel guide
9 Guide groove for angle stop
10 Table extension
11 Table width enlargement
12 Fastening nut for the cover of the saw blade storage and for attaching the push stick
13 Push stick
14 Cover of the saw blade storage
15 Ring spanner (24 mm; 23 mm)
16 Mounting holes
17 Saw table
18 Clamping handle for table width enlargement
19 Handwheel
20 Crank for lowering and raising the saw blade
21 Safety flap of On/Off switch

OBJ_BUCH-1375-003.book Page 32 Thursday, January 29, 2015 12:34 PM

22 Fixture for storage of the blade guard
23 Retaining clamp for storage of the angle stop
24 Guide rod of the table extension
25 Stop for 45° bevel angle
26 Locking lever for adjustment of bevel angles
27 Scale for bevel angle
28 Stop for 0° bevel angle
29 Clamping handle for the sliding table
30 V-guide groove on saw table for parallel guide
31 Insert plate
32 Saw blade
33 Sticker for marking of the cutting line
34 Profile rail
35 Guide groove for parallel guide **8**
36 Storage for parallel guide **8**
37 Hex key (5 mm)
38 Locking screw of the table extension
39 “Auxiliary parallel guide” fastening kit
40 Chip ejector
41 Extraction adapter
42 Cable holder
43 Fastening kit for “table extension”
44 Bottom plate
45 Insert-plate notches
46.1 Clamping lever for locking blade guard **5.1**
46.2 Clamping screw for locking blade guard **5.2**
47 Clamping handle of the parallel guide
48 V-guide of parallel guide
49 Auxiliary parallel guide
50 Guide rail of the angle stop
51 Knurled screw for locking the angle stop
52 “Profile rail” fastening kit
53 Knurled nut for profile rail
54 Lower saw blade cover
55 Fastening screw of the lower saw blade cover
56 Clamping nut
57 Spindle lock lever
58 Clamping flange
59 Mounting flange
60 Tool spindle
61 Indicator for bevel angle
62 Locking knob for various mitre angles
63 Angle indicator on the angle guide
64 Lens
65 Saw-table clearance indicator
66 ON button
67 Cross-head screw for adjustment of stop **28**
68 Screw for bevel angle indicator
69 Cross-head screw for adjustment of stop **25**
70 Front hex socket screws (5 mm) for parallelism adjustment of the saw blade
71 Rear hex socket screws (5 mm) for parallelism adjustment of the saw blade
72 Screw for saw-table clearance indicator
73 Screw for parallel guide clearance indicator
74 Adjusting screws for insert plate
75 Holder for storage of “auxilliary parallel guide fastening kit”
76 Retaining clamp for storage of the extraction adapter
77 Saw blade storage
78 Holder for storage of the hex key
79 Retaining bracket for storage of the auxiliary parallel guide
80 Adjustment piece
81 Adjustment screw for tightening tension of guide **48**
82 Hex socket screws (5 mm) for parallelism adjustment of the parallel guide

*** depending on country version**

Accessories shown or described are not part of the standard delivery scope of the product. A complete overview of accessories can be found in our accessories program.

Noise Information

Sound emission values determined according to EN 61029-2-1.

Typically the A-weighted noise levels of the product are: Sound pressure level 98 dB(A); Sound power level 111 dB(A). Uncertainty K = 3 dB.
Wear hearing protection!

Declaration of Conformity CE

We declare under our sole responsibility that the product described under “Technical Data” is in conformity with all relevant provisions of the directives 2011/65/EU, 2004/108/EC, 2006/42/EC including their amendments and complies with the following standards:
EN 61029-1, EN 61029-2-1.

EC Type Examination No. MSR 1035 by notified testing agency No. 0366.

Technical file (2006/42/EC) at:
Robert Bosch GmbH, PT/ETM9,
70764 Leinfelden-Echterdingen, GERMANY

Henk Becker	Helmut Heinzelmann
Executive Vice President Engineering	Head of Product Certification PT/ETM9

ppa. i.V.

Robert Bosch GmbH, Power Tools Division
70764 Leinfelden-Echterdingen, GERMANY
Leinfelden, 29.01.2015

OBJ_BUCH-1375-003.book Page 33 Thursday, January 29, 2015 12:34 PM

Technical Data

Table saw				GTS 10 XC
Article number		3 601 L30 400 3 601 L30 440 3 601 L30 470 3 601 L30 490 3 601 L30 4P0 3 601 L30 4R0	3 601 L30 460	3 601 L30 430
Rated power input	W	2100	1650	2000
No-load speed	min^{-1}	3200	4200	4200
Reduced starting current		●	●	●
Run-on Brake		●	●	●
Overload Protection		●	●	●
Weight according to EPTA-Procedure 01/2003	kg	35	35	35
Protection class		⧈/II	⧈/II	⧈/II
Dimensions (incl. removable product features)				
Width x depth x height	mm	775 x 768 x 343	775 x 768 x 343	775 x 768 x 343

Maximum workpiece dimensions, see page 37.

The values given are valid for a nominal voltage [U] of 230 V. For different voltages and models for specific countries, these values can vary.

Dimension of suitable saw blades		
Saw blade diameter	mm	254
Blade body thickness	mm	1.8
Tooth thickness/setting, min.	mm	2.6
Mounting hole diameter	mm	30

Assembly

▶ **Avoid unintentional starting of the machine. During assembly and for all work on the machine, the power plug must not be connected to the mains supply.**

Delivery Scope



Please also observe the representation of the delivery scope at the beginning of the operating instructions.

Before starting the operation of the machine for the first time, check if all parts listed below have been supplied:

- Table saw with mounted saw blade **32** and riving knife **7**
- Angle stop **3**
- Profile rail **34**
- Fastening kit “profile rail” **52**
  (guide plate, knurled nut, screw, washer)
- Parallel guide **8**
- Auxiliary parallel guide **49**
- “Auxiliary parallel guide” fastening kit **39**
  (3 fastening screws, 3 washers, 3 wing nuts)
- Blade guard **5.x***
  * depending on country version: **5.1**/**5.2**
- Table extension **10**
- Fastening kit for “table extension”**43**
  (2 fastening screws, 2 washers, 1 open-end spanner)
- Hex key **37**
- Ring spanner **15**
- Cover of the saw blade storage **14**
- Push stick **13**
- Insert plate **31**

Note: Check the power tool for possible damage.
Before further use of the machine, check that all protective devices are fully functional. Any lightly damaged parts must be carefully checked to ensure flawless operation of the tool. All parts must be properly mounted and all conditions fulfilled that ensure faultless operation.
Damaged protective devices and parts must be immediately replaced by an authorised service centre.

Mounting Individual Components

- Carefully remove all parts included in the delivery from their packaging.
- Remove all packaging material from the machine and the accessories provided.
- Open the bottom plate **44** and remove the packaging material under the motor block. (see figure a)

The following product features are fastened directly to the housing:
Push stick **13**, ring spanner **15**, Allen key **37**, parallel guide **8**, angle guide **3**, extraction adapter **41**, auxiliary parallel guide **49** with fastening kit **39**, blade guard **5.x**.

- Carefully remove these product features from their storage locations.
  Also see figures R1 – R6.

Additionally required tools (not in delivery scope):

- Slotted screwdriver
- Cross-head screwdriver
- Angle gauge

OBJ_BUCH-1375-003.book Page 34 Thursday, January 29, 2015 12:34 PM

Mounting the Insert Plate (see figure b)

– Hook insert plate **31** into the rear insert-plate notches **45** of the tool basin.
– Guide the insert plate down.
– Press on the insert plate until it engages at the front in the tool basin.

The front side of the insert plate **31** must be flush with or somewhat lower than the saw table; the rear side must be flush with or somewhat above the saw table. (also see "Adjusting the Level of the Insert Plate", page 39)

Mounting the Blade Guard* (see figure c)
*** depending on country version**

– Turn crank **20** clockwise to the stop, so that the saw blade **32** is in the highest possible position above the saw table.
– Insert the blade guard **5.x** into the recess in riving knife **7**.
– Tighten the clamping lever **46.1**.
or
Tighten clamping screw **46.2** with hex key **37**.
– Adjust the blade guard according to the workpiece height. When sawing, the blade guard must always face lightly against the workpiece.

Note: Clamping lever **46.1** is indexed (adjustable), allowing it to be set to an ergonomically favourable or space-saving position.
With the clamping lever tightened, pull its lever away from the blade guard, turn it to the desired position and allow it to engage again.

Mounting the Table Extension (see figure d)

For assembly, use the fastening kit for "table extension" **43**. (2 fastening screws, 2 washers, 1 open-end spanner)

– Bolt the table extension **10** with the guide rods **24**. When doing this, the recesses in the table extension must face upward.

Mounting the Parallel Guide (see figure e)

The parallel guide **8** can be positioned either left or right from the saw blade.

– Loosen clamping handle **47** of parallel guide **8**. This releases V-guide **48**.
– Firstly, mount the parallel guide via the V-guide in guide groove **30** of the saw table. Now, position the parallel guide into the front guide groove **35** of the saw table. The parallel guide can now be moved to any position.
– To lock the parallel guide, press the clamping handle **47** down.

Mounting the Auxiliary Parallel Guide (see figure f)

When sawing narrow workpieces and bevel angles, the auxiliary parallel guide **49** must be mounted to parallel guide **8**.

The auxiliary parallel guide can be mounted left or right from parallel guide **8**, as required.

For assembly, use the "auxiliary parallel guide" fastening kit **39**. (3 fastening screws, 3 washers, 3 wing nuts)

– Insert the fastening screws through the lateral holes in the parallel guide **8**. The heads of the screws serve as a guide for the auxiliary parallel guide.
– Move the auxiliary parallel guide **49** over the heads of the fastening screws.
– Mount the washers to the fastening screws and tighten them with the wing nuts.

Mounting the Angle Stop (see figures g1 – g2)

– Insert the guide rail **50** of the angle stop **3** into one of the guide grooves **9** of the saw table intended for this purpose.

Note: In the lefthand guide groove, the position of the angle stop can be affixed on the sliding table by tightening the knurled screw **51**.

For improved placement of long workpieces, the angle stop can be extended with profile rail **34**.

– If required, mount the profile rail to the angle stop with fastening kit **52**.

Stationary or Flexible Mounting

▶ **To ensure safe handling, the machine must be mounted on a level and stable surface (e. g., workbench) prior to using.**

Mounting to a Working Surface (see figure h)

– Fasten the power tool with suitable screw fasteners to the working surface. The mounting holes **16** serve for this purpose.

Mounting to a Bosch Saw Stand (see figure i)

With the height-adjustable legs, Bosch saw stands (e. g. GTA 60 W, GTA 6000) provide firm support for the power tool on any surface.

▶ **Read all safety warnings and instructions included with the worktable.** Failure to observe safety warnings and instructions can lead to electrical shock, fire and/or cause serious injuries.

▶ **Assemble the worktable properly before mounting the power tool.** Perfect assembly is important in order to prevent the risk of collapsing.

– Mount the power tool in transport position on the saw stand.

Dust/Chip Extraction

Dusts from materials such as lead-containing coatings, some wood types, minerals and metal can be harmful to one's health. Touching or breathing-in the dusts can cause allergic reactions and/or lead to respiratory infections of the user or bystanders.
Certain dusts, such as oak or beech dust, are considered as carcinogenic, especially in connection with wood-treatment additives (chromate, wood preservative). Materials containing asbestos may only be worked by specialists.

– Always use dust extraction.
– Provide for good ventilation of the working place.
– It is recommended to wear a P2 filter-class respirator.

Observe the relevant regulations in your country for the materials to be worked.

The dust/chip extraction can be blocked by dust, chips or workpiece fragments.

OBJ_BUCH-1375-003.book Page 35 Thursday, January 29, 2015 12:34 PM

– Switch the machine off and pull the mains plug from the socket outlet.
– Wait until the saw blade has come to a complete stop.
– Determine the cause of the blockage and correct it.

Cleaning the Lower Saw Blade Cover (see figure j)

The lower saw blade cover **54** can be opened for removal of workpiece fragments and large chips.

– Switch the machine off and pull the mains plug from the socket outlet.
– Wait until the saw blade has come to a complete stop.
– Tilt the machine on it's side.
– Remove bottom plate **44**.
– Loosen fastening screw **55** and open the lower saw blade cover **54**.
– Remove workpiece fragments and chippings.
– Shut the lower saw blade cover and screw it on again. Screw the bottom plate on again.
– Bring the power tool into the working position.

External Dust Extraction (see figure k)

To connect a vacuum cleaner to the sawdust ejector **40**, use the supplied extraction adapter **41**.

– Firmly attach the extraction adapter **41** and the vacuum hose.
– Additionally, a dust extraction system can be connected with the Y-adapter (accessory) to vacuum connection **6**, to increase the extraction performance.

The vacuum cleaner must be suitable for the material being worked.

When vacuuming dry dust that is especially detrimental to health or carcinogenic, use a special vacuum cleaner.

Changing the Saw Blade (see figures l1 – l4)

► **Before any work on the machine itself, pull the mains plug.**

► **When mounting the saw blade, wear protective gloves.** Danger of injury when touching the saw blade.

Use only saw blades whose maximum permitted speed is higher than the no-load speed of the power tool.

Use only saw blades that correspond with the characteristic data given in these operation instructions and that are tested and marked in accordance with EN 847-1.

Use only saw blades recommended by the tool manufacturer and suitable for sawing the materials to be cut.

Removing the Saw Blade

– Using a screwdriver, raise the insert plate **31** at the front and remove it from the tool basin.
– Turn crank **20** clockwise to the stop, so that the saw blade **32** is in the highest possible position above the saw table.
– Tilt the blade guard **5.x** toward the rear to the stop.
– Turn the clamping nut **56** with the ring spanner **15** (24 mm) and at the same time, pull the spindle lock lever **57** until it engages.
– Keep the spindle lock lever pulled and unscrew the clamping nut turning in anticlockwise direction.
– Remove the clamping flange **58**.
– Remove the saw blade **32**.

Mounting the Saw Blade

If required, clean all parts to be mounted prior to assembly.

– Place the new saw blade onto the supporting flange **59** of the tool spindle **60**.

Note: Do not use saw blades that are too small. The clearance between saw blade and riving knife must not exceed 5 mm (max.).

► **When mounting the saw blade, pay attention that the cutting direction of the teeth (arrow direction on the saw blade) corresponds with the direction of the arrow on the blade guard!**

– Mount the clamping flange **58** and the clamping nut **56**.
– Turn the clamping nut **56** with the ring spanner **15** (24 mm) and at the same time, pull the spindle lock lever **57** until it engages.
– Tighten the clamping nut in clockwise direction (Tightening torque approx. 15 – 23 Nm).
– Reinsert the insert plate **31**.
– Tilt blade guard **5.x** down again.

Operation

► **Before any work on the machine itself, pull the mains plug.**

Transport and Working Position of the Saw Blade

Transport Position

– Turn the handwheel **19** in anticlockwise direction until the teeth of the saw blade **32** are positioned below the saw table **17**.

For additional information on transport, see page 39.

Working Position

– Turn the crank **20** clockwise, until the teeth of the saw blade **32** are positioned above the workpiece.

Note: Take care that the blade guard is properly positioned. When sawing, it must always face against the workpiece.

Increasing the Size of the Saw Table

Long workpieces must be underlaid or supported at their free end.

Table Width Enlargement (see figure A)

The table width enlargement **11** enlarges the saw table **17** toward the right by 435 mm (max.).

– Completely pull the clamping handle **18** for the table width enlargement upward.
– Pull out the table width enlargement **11** to the desired length (also see "Adjusting the Parallel Guide With the Saw Table Extended", page 36).
– Press clamping handle **18** downward.
The table width enlargement is now locked.

OBJ_BUCH-1375-003.book Page 36 Thursday, January 29, 2015 12:34 PM

Table Extension (see figure B)

The table extension **10** extends saw table **17** to the rear by 520 mm (max.).

– Loosen the locking screws **38** on the guide rods **24**.
– Pull out the table extension **10** to the desired length.
– To lock the position, firmly tighten both locking screws **38**.

For heavy workpieces, it may be required to support the table extension.

Sliding Table (see figure C)

With the sliding table **2**, workpieces to a maximum width of 350 mm can be sawn.
At the same time, a higher precision is achieved during sawing, especially in conjunction with the angle stop **3**. (see "Sawing Mitre Angles with the Sliding Table", page 38)

– Completely pull the clamping lever **29** for the sliding table upward.
  In this manner, the sliding table can be moved both toward the front as well as toward the rear to the stop.

Adjusting the Cutting Angle

To ensure precise cuts, the basic adjustment of the machine must be checked and adjusted as necessary after intensive use (see "Checking and Adjusting the Basic Adjustment", page 38).

Adjusting Bevel Angles (Saw Blade) (see figure D)

The bevel angle can be set in a range from −1° to +47°.

– Turn locking lever **26** in anticlockwise direction.

Note: By completely loosening the locking knob, the saw blade tilts approx. to the 30° position by means of gravity force.

– Push or pull handwheel **19** alongside the connecting link until the angle indicator **61** indicates the desired bevel angle.
– Hold the handwheel in this position and tighten locking lever **26** again.

For quick and precise setting of the standard 0° and 45° angles, factory-set stops have been provided for.

Adjusting Mitre Angles (Angle Stop) (see figure E)

The mitre angle can be set in the range from 60° (left side) to 60° (right side).

– Loosen the locking knob **62** in case it is tightened.
– Turn the angle stop until the angle indicator **63** indicates the requested mitre angle.
– Tighten the locking knob **62** again.

For quick and precise setting of frequently used mitre angles, stop screw for the 45° angles (left and right) and 0° have been provided for on angle stop **3**.

– Loosen the locking knob **62** in case it is tightened.
– Tilt the adjustment piece **80** outward.
– Turn the angle stop in such a manner that the thread of the desired stop screw is positioned rightward to the adjustment piece.
– Tilt adjustment piece **80** inward and turn the angle stop until the thread of the stop screw faces against the adjustment piece.
– Tighten the locking knob **62** again.

Adjusting the Parallel Guide

The parallel guide **8** can be positioned either left (black scale) or right (silver scale) from the saw blade.
The mark in the lens **64** indicates the set clearance of the parallel guide to the saw blade on the scale **1**.

Position the parallel guide on the desired side of the saw blade (see "Mounting the Parallel Guide", page 34).

With the Saw Table not Extended

– Loosen clamping handle **47** of parallel guide **8**.
  Move the parallel guide until the mark in the lens **64** indicates the desired clearance to the saw blade.
  When the saw table is not extended, the bottom labelling of the silver scale applies **1**.
– To lock the parallel guide, press clamping handle **47** down again.

With the Saw Table Extended (see figure F)

– Position the parallel guide on the right side of the saw blade.
  Move the parallel guide until the mark in the lens **64** indicates 33 cm on the bottom scale.
  To lock the parallel guide, press clamping handle **47** down again.
– Completely pull the clamping handle **18** for the table width enlargement upward.
– Pull table width enlargement **11** outward until clearance indicator **65** indicates the desired clearance to the saw blade on the top scale.
– Press clamping handle **18** downward.
  The table width enlargement is now locked.

Adjusting the Auxiliary Parallel Guide (see figure G)

When sawing narrow workpieces and bevel angles, the auxiliary parallel guide **49** must be mounted to parallel guide **8**.

The auxiliary parallel guide can be mounted left or right to parallel guide **8** as required.

When sawing workpieces, these can become jammed between the parallel guide and the saw blade, be caught by the rotating saw blade, and be thrown from the machine.
Therefore, adjust the auxiliary parallel guide in such a manner that its guiding end is located between the front saw blade tooth and the front edge of the riving knife.

– For this, loosen all wing nuts and move the auxiliary parallel guide until only the two front screws can be used for fastening.
– Tighten the wing nuts again.

OBJ_BUCH-1375-003.book Page 37 Thursday, January 29, 2015 12:34 PM

Adjusting the Riving Knife

The riving knife **7** prevents the saw blade **32** from becoming jammed in the saw cut. Otherwise, there is danger of kickback when the saw blade becomes wedged in the workpiece.

Always pay attention that the riving knife is properly adjusted:

- The radial clearance between saw blade and riving knife may not exceed 5 mm (max.).
- The thickness of the riving knife must be smaller than the cutting width and greater than the blade thickness.
- The riving knife must always be in a line to the saw blade.
- For normal separating cuts, the riving knife must always be in the highest possible position.

The machine is supplied with the riving knife correctly adjusted.

Adjusting the height of the riving knife (see figure H)

For sawing grooves, the height of the riving knife must be adjusted.

- ▶ **Use the machine for grooving or rebating only with an appropriately suitable protective device (e. g. a tunnel blade guard).**
- Loosen clamping lever **46.1** or clamping screw **46.2** until blade guard **5.x** can easily be pulled from the recess in riving knife **7**.
  To protect the blade guard against damage, deposit it in the provided holding fixture **22** on the housing (also see figure R1).
- Turn crank **20** clockwise to the stop, so that the saw blade **32** is in the highest possible position above the saw table.
- Push the riving knife **7** down to the stop.

Starting Operation

- ▶ **Observe the mains voltage!** The voltage of the power source must correspond with the data on the type plate of the machine.

Switching On (see figure I1)

To save energy, only switch the power tool on when using it.

- Tilt safety flap **21** upward.
- To start the operation, press the green ON button **66**.

Switching Off (see figure I2)

- Press on the safety flap **21**.

Power Failure

The ON/OFF switch is a so-called non-voltage switch, which prevents the power tool from restarting after a power failure (e. g., when the mains plug is pulled during operation).

To restart the operation of the machine afterwards, the green ON button **66** must be pressed again.

Working Advice

General Sawing Instructions

- ▶ **For all cuts, it must first be ensured that the saw blade at no time can come in contact with the stops or other machine parts.**
- ▶ **Use the machine for grooving or rebating only with an appropriately suitable protective device (e. g. a tunnel blade guard).**
- ▶ **Do not use the machine for cutting slots (stopped grooves).**

Protect the saw blade against impact and shock. Do not subject the saw blade to lateral pressure.

The riving knife must be in alignment with the saw blade to avoid jamming of the workpiece.

Do not saw warped/bent workpieces. The workpiece must always have a straight edge to face against the parallel guide.

Always keep/store the push stick with the power tool.

Position of the Operator (see figure J)

- ▶ **Do not stand in a line with the saw blade in front of the machine. Always stand aside of the saw blade.** This protects your body against possible kickback.
- Keep hands, fingers and arms away from the rotating saw blade.

Observe the following instructions:

- Hold the workpiece securely with both hands and press it firmly against the saw table.
- When sawing narrow workpieces and bevel angles, always use the supplied hold-down stick **13** and the auxiliary parallel guide **49**.

Marking the Cutting Line (see figure K)

- Mark the saw blade width on the round yellow sticker **33**. This allows for exact positioning of the workpiece for sawing, without having to open the blade guard.

Maximum Workpiece Dimensions

Bevel angle	Max. workpiece height [mm]
0°	79
45°	56

Sawing

Sawing Straight Cuts

- Adjust the parallel guide **8** to the requested cutting width. (see “Adjusting the Parallel Guide”, page 36)
- Position the workpiece on the saw table in front of the blade guard **5.x**.
- Raise or lower the saw blade with the crank **20** so that the upper saw teeth project approx. 5 mm above the workpiece surface.
- Adjust the blade guard according to the workpiece height. When sawing, the blade guard must always face lightly against the workpiece.
- Switch on the machine.
- Saw through the workpiece applying uniform feed.
- Switch off the machine and wait until the saw blade has come to a complete stop.

Sawing Bevel Angles

- Adjust the desired bevel angle. (see “Adjusting Bevel Angles”, page 36)
- Follow the worksteps in section “Sawing Straight Cuts” accordingly.

OBJ_BUCH-1375-003.book Page 38 Thursday, January 29, 2015 12:34 PM

Sawing Mitre Angles (see figure L)

– Adjust the requested mitre angle. (see “Adjusting Mitre Angles”, page 36)
– Place the workpiece against profile rail **34**.
The profile may not be on the cutting line. If so, loosen knurled nut **53** and move the profile.
– Raise or lower the saw blade with the crank **20** so that the upper saw teeth project approx. 5 mm above the workpiece surface.
– Adjust the blade guard according to the workpiece height. When sawing, the blade guard must always face lightly against the workpiece.
– Switch on the machine.
– With one hand, press the workpiece against the profile rail and with the other hand, slowly move the angle stop via locking knob **62** toward the front in guide groove **9**.
– Switch off the machine and wait until the saw blade has come to a complete stop.

Sawing Mitre Angles with the Sliding Table Locked

– Adjust the requested mitre angle. (see “Adjusting Mitre Angles”, page 36)
– The angle stop must move freely in the guide groove **9** (leftward or rightward).
For this, loosen knurled screw **51**, if required.
– Follow the worksteps in section “Sawing Straight Cuts” accordingly.

Sawing Mitre Angles with the Sliding Table

– Adjust the requested mitre angle. (see “Adjusting Mitre Angles”, page 36)
– Completely pull clamping handle **29** for the sliding table upward and pull the sliding table **2** toward the front.
– Position the workpiece on the saw table in front of the blade guard **5.x**.
– Position the angle stop **3** in front of the workpiece in the lefthand guide groove **9**. Lock this position by firmly tightening the knurled screw **51**.
– Follow the worksteps in section “Sawing Straight Cuts” accordingly.

Checking and Adjusting the Basic Adjustment

To ensure precise cuts, the basic adjustment of the machine must be checked and adjusted as necessary after intensive use.
A certain level of experience and appropriate specialty tools are required for this.

A Bosch after-sales service station will handle this maintenance task quickly and reliably.

Setting the Stops for Standard 0°/ 45° Bevel Angles

– Bring the power tool into the working position.
– Adjust to a 0° bevel angle.
– Tilt the blade guard **5.x** toward the rear to the stop.

Checking: (see figure M1)

– Set an angle gauge to 90° and place it on the saw table **17**.

The leg of the angle gauge must be flush with the saw blade **32** over the complete length.

Adjusting: (see figure M2)

– Loosen screw **67**.
The 0° stop **28** can now be moved.
– Loosen locking lever **26**.
– Move handwheel **19** toward the 0° stop until the leg of the angle gauge is flush with the saw blade over the complete length.
– Hold the handwheel in this position and tighten locking lever **26** again.
– Tighten screw **67** again.

When the angle indicator **61** is not in line with the 0° mark of scale **27**, loosen screw **68** with a commercially available cross-head screwdriver and align the angle indicator alongside the 0° mark.

Repeat the above mentioned worksteps accordingly for the 45° bevel angle (loosening screw **69**; moving the 45° stop **25**). In this, the angle indicator **61** must not be misadjusted.

Parallelism of the Saw Blade to the Guide Grooves of the Angle Stop (see figure N)

– Bring the power tool into the working position.
– Tilt the blade guard **5.x** toward the rear to the stop.

Checking:

– With a pencil, mark the first visible saw tooth on the left side that projects above the insert plate.
– Set an angle gauge to 90° and place it on the edge of the guide groove **9**.
– Move the leg of the angle gauge until it touches the marked saw tooth, and read the clearance between saw blade and guide groove.
– Turn the saw blade until the marked tooth projects above the right side of the insert plate.
– Move the angle gauge alongside the guide groove to the marked tooth.
– Measure the clearance between the saw blade and guide groove again.

Both clearances measured must be identical.

Adjusting:

– Loosen hex socket screws **70** at the front below the saw table and hex socket screws **71** at the rear below the saw table with the supplied hex key **37**.
– Carefully move the saw blade until it is parallel to guide groove **9**.
– Retighten all screws **70** and **71** again.

Adjusting the Saw Table’s Clearance Indicator (see figure O)

– Position the parallel guide on the right side of the saw blade.
Move the parallel guide until the mark in the lens **64** indicates 33 cm on the bottom scale.
To lock the parallel guide, press clamping handle **47** down again.
– Completely pull clamping handle **18** upward and pull the table width enlargement **11** outward to the stop.

OBJ_BUCH-1375-003.book Page 39 Thursday, January 29, 2015 12:34 PM

Checking:
On the upper scale **1**, clearance indicator **65** must indicate the identical value as the mark in lens **64** on the bottom scale **1**.

Adjusting:

– Loosen screw **72** with a cross-head screwdriver and align clearance indicator **65** alongside the 33 cm mark of the upper scale **1**.

Adjusting the Parallelism of the Parallel Guide (see figure P)

– Bring the power tool into the working position.
– Tilt the blade guard **5.x** toward the rear to the stop.
– Loosen the clamping handle **47** of the parallel guide and slide it until it touches the saw blade.

Checking:
The parallel guide **8** must touch the saw blade over the complete length.

Adjusting:

– Loosen the hex socket screws **82** using the supplied hex key **37**.
– Carefully move the parallel guide **8** until it touches the saw blade over the complete length.
– Hold the parallel guide in this position and press the clamping handle **47** down again.
– Retighten the hex socket screws **82**.

Adjusting the Tension Force of the Parallel Guide

The tensioning force of the parallel guide **8** can decrease after frequent usage.

– Tighten the adjustment screw **81** until the parallel guide can be firmly affixed on the saw table again.

Adjusting the Lens of the Parallel Guide (see figure P)

– Bring the power tool into the working position.
– Tilt the blade guard **5.x** toward the rear to the stop.
– Move parallel guide **8** from the right until it touches the saw blade.

Checking:
The mark of lens **64** must be in a line with the 0° mark of scale **1**.

Adjusting:

– Loosen screw **73** using a cross-head screwdriver and align the clearance indicator alongside the 0° mark.

Adjusting the Level of the Insert Plate (see figure Q)

Checking:
The front side of the insert plate **31** must be flush with or somewhat lower than the saw table; the rear side must be flush with or somewhat above the saw table.

Adjusting:

– Adjust the correct level of the four adjusting screws **74** with a suitable slotted screwdriver.

Storage and Transport

Storing Product Features (see figures R1 – R6)

For storage purposes, certain product features can be securely fastened to the power tool.

– Loosen auxiliary parallel guide **49** from parallel guide **8**.
– Attach all loose tool parts to their storage locations on the housing. (see Table)

Figure	Product Feature	Storage Location
R1	Blade guard **5.x**	Insert into the recess of fixture **22** and tighten with clamping lever **46.1** or clamping screw **46.2**
R2	“Auxiliary parallel guide” fastening kit **39**	Clip into the holders **75**
R2	Extraction adapter **41**	Insert into retaining clamp **76**
R3	Unused saw blades	Insert into saw blade storage **77** and lock the cover **14** over it with fastening nut **12**
R3	Ring spanner **15**	Insert into saw blade storage **77** and lock the cover **14** over it with fastening nut **12**
R3	Push stick **13**	Lock in place with fastening nut **12**
R4	Hex key **37**	Insert into holders **78**
R4	Parallel guide **8**	Insert into the storage compartment for the parallel guide **36**
R5	Angle stop **3**	Insert into retaining clamp **23**
R6	Auxiliary parallel guide **49**	Insert into the storage compartment for the auxiliary parallel guide and lock in place with the retaining bracket **79**

Carrying the Power Tool

Before transporting the power tool, the following steps must be carried out:

– Bring the machine into the transport position. (see “Transport Position”, page 35)
– Remove all accessories that cannot be mounted firmly to the power tool.
If possible, place unused saw blades in an enclosed container for transport.
– Slide the table width enlargement **11** completely in and press tensioning lever **18** downward to lock it.
– Slide the table extension **10** completely in and firmly tighten the locking screws **38** on the guide rods **24**.
– Wind the mains cable around the cable holder **42**.
– For lifting or transport, use the carrying handles **4**.

▶ **When transporting the power tool, only use the transport fixtures. Never carry the power tool by the protective devices, the table extension 10 or the table width enlargement 11.**

▶ **The power tool should always be carried by two persons in order to avoid back injuries.**

OBJ_BUCH-1375-003.book Page 40 Thursday, January 29, 2015 12:34 PM

Maintenance and Service

Maintenance and Cleaning

► **Before any work on the machine itself, pull the mains plug.**

If the replacement of the supply cord is necessary, this has to be done by Bosch or an authorized Bosch service agent in order to avoid a safety hazard.

Cleaning

– For safe and proper working, always keep the power tool and its ventilation slots clean.
– Remove dust and chips after each working procedure by blowing out with compressed air or with a brush.

Power Tool Lubrication



Lubricants:
SAE 10/SAE 20 engine oil

– If required, open the bottom plate and apply oil to the lubrication points of the power tool at the indicated locations. (see figures S1 – S2)

An authorized Bosch after-sales service agent will carry out this work quickly and reliably.

Observe all applicable environmental regulations when disposing of old grease and solvents.

Measures for Noise Reduction

Measures on behalf of the manufacturer:

– Soft starting
– Delivery of the machine with a saw blade developed particularly for noise reduction

Measures on behalf of the user:

– Low-vibration assembly on a firm working surface
– Use of saw blades with noise-reducing functions
– Regular cleaning of saw blade and power tool

Accessories

	Article number
Dust bag	2 605 411 205
Y-adapter TSVH 3	2 610 015 513
Angle stop	2 610 015 508
Push stick	2 610 015 022
Saw stand GTA 60 W	0 601 B12 000
Saw stand GTA 6000	0 601 B24 100
Saw blades for wood and plate materials, panels and strips/mouldings	
Saw blade 254 x 30 mm, 40 teeth	2 608 640 443
Saw blade 254 x 30 mm, 60 teeth	2 608 640 444

After-sales Service and Application Service

In all correspondence and spare parts order, please always include the 10-digit article number given on the type plate of the machine.

Our after-sales service responds to your questions concerning maintenance and repair of your product as well as spare parts. Exploded views and information on spare parts can also be found under:
www.bosch-pt.com
Bosch's application service team will gladly answer questions concerning our products and their accessories.

Great Britain

Robert Bosch Ltd. (B.S.C.)
P.O. Box 98
Broadwater Park
North Orbital Road
Denham
Uxbridge
UB 9 5HJ
At www.bosch-pt.co.uk you can order spare parts or arrange the collection of a product in need of servicing or repair.
Tel. Service: (0344) 7360109
E-Mail: boschservicecentre@bosch.com

Ireland

Origo Ltd.
Unit 23 Magna Drive
Magna Business Park
City West
Dublin 24
Tel. Service: (01) 4666700
Fax: (01) 4666888

Australia, New Zealand and Pacific Islands

Robert Bosch Australia Pty. Ltd.
Power Tools
Locked Bag 66
Clayton South VIC 3169
Customer Contact Center
Inside Australia:
Phone: (01300) 307044
Fax: (01300) 307045
Inside New Zealand:
Phone: (0800) 543353
Fax: (0800) 428570
Outside AU and NZ:
Phone: +61 3 95415555
www.bosch.com.au

Republic of South Africa

Customer service
Hotline: (011) 6519600

Gauteng – BSC Service Centre
35 Roper Street, New Centre
Johannesburg
Tel.: (011) 4939375
Fax: (011) 4930126
E-Mail: bsctools@icon.co.za

OBJ_BUCH-1375-003.book Page 41 Thursday, January 29, 2015 12:34 PM

KZN – BSC Service Centre
Unit E, Almar Centre
143 Crompton Street
Pinetown
Tel.: (031) 7012120
Fax: (031) 7012446
E-Mail: bsc.dur@za.bosch.com

Western Cape – BSC Service Centre
Democracy Way, Prosperity Park
Milnerton
Tel.: (021) 5512577
Fax: (021) 5513223
E-Mail: bsc@zsd.co.za

Bosch Headquarters
Midrand, Gauteng
Tel.: (011) 6519600
Fax: (011) 6519880
E-Mail: rbsa-hq.pts@za.bosch.com

Disposal

The machine, accessories and packaging should be sorted for environmental-friendly recycling.

Do not dispose of power tools into household waste!

Only for EC countries:



According to the European Directive 2012/19/EU for Waste Electrical and Electronic Equipment and its implementation into national right, power tools that are no longer usable must be collected separately and disposed of in an environmentally correct manner.

Subject to change without notice.