



Bench Stand Construction



A Simple Bench can be constructed for the UJK worktop table, please follow the instructions below to construct the bench stand.

The cut list can vary depending on timber available and how tall the user is. The only measurement which should not be changed is the stretcher length.

Long stretchers x 4, 1102mm x 42mm x 65mm

Short stretchers x 4, 718mm x 42 x 65mm



Legs x 4, 840mm high 85 x 85mm

Notches in legs can be done using a router. It is Recommended to do all four legs at the same time so they are all in the same position and depth. A 24mm notch will give a side protrusion of 18mm. If stretchers width is different, the depth of leg notch needs to be adjusted to give 18mm protrusion.

When assembling the bench we recommend using large wood screws, pre drilled and countersunk.

The top frame of the UJK table does not need to be screwed to the legs unless desired.

If the UJK work top is regularly removed to use on trestles its a good idea to chamfer the top of the legs.

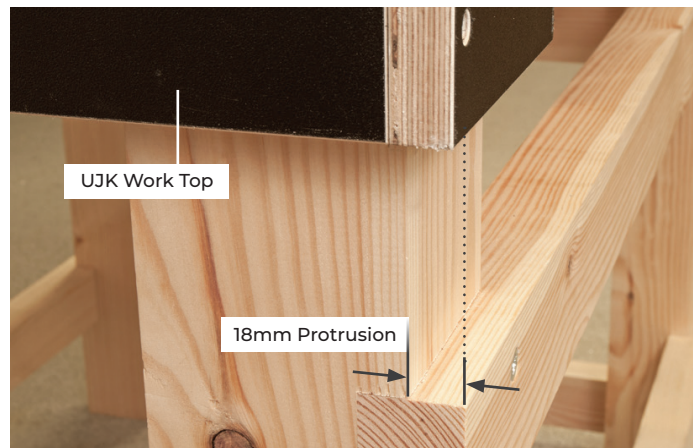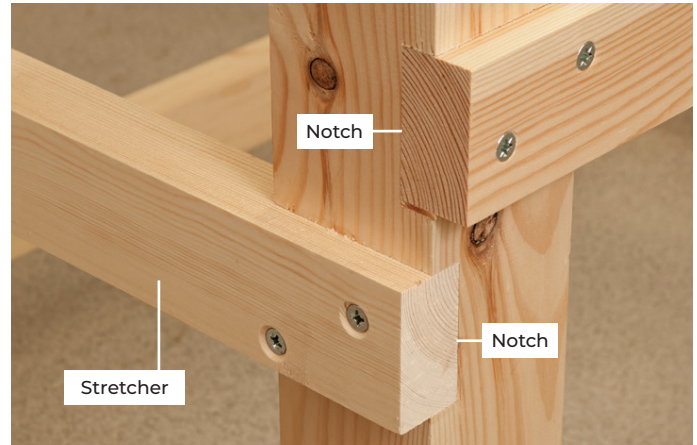

The material can now be clamped to the side of the apron and stretchers.

